


DAKOTAHO

Residential Water Softening System

Metered Water Softener Installation / Operation Manual



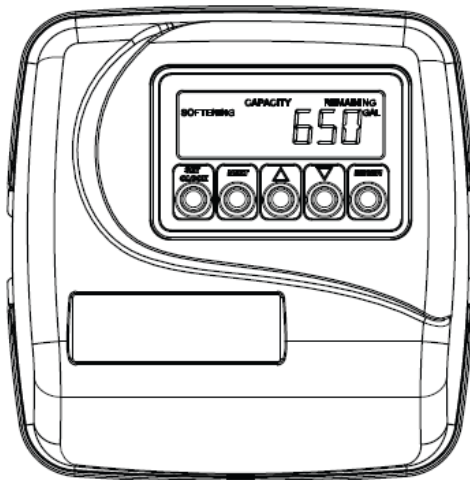

For help with installation
or troubleshooting
please contact
Water Control Corporation.

Water Control Tech Services Department:

Toll Free: 1-866-405-1268

Local: 763-427-9638


Fax: 763-427-5665

Email: techsupport@watercontrolinc.com



DS24-WC, DS32-WC, DST24-WL, DST24-WX,
DST32-WL, DST32-WX, DST48-WL and DST60
-WL are certified by IAPMO R&T against NSF/
ANSI 44 and NSF/ANSI/CAN 372.

Installation Procedure

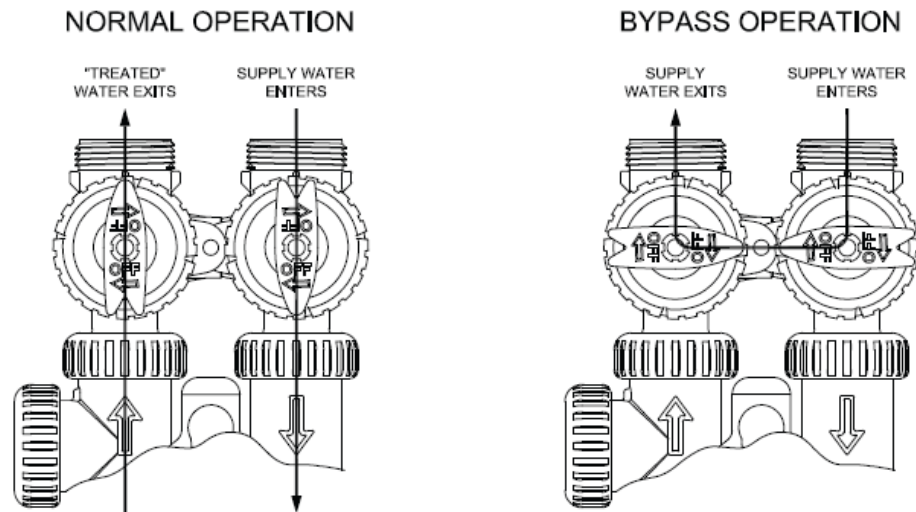

Bypass Valve Diagram


1. **Identify installation location for water softener.** Piping should be such that all household water, with the exception of outside hydrants, flows through softener. A hard water line may be run to a kitchen tap if so desired. This system and installation must comply with state and local laws and regulations.
2. **Connect water piping.** This unit has been supplied with a manually operated bypass device which enables the softener to be isolated from the water service lines for maintenance and service, and also to maintain the continuity of the water supply when the softener is disconnected. *Separate bypass fittings from valve before sweating any copper. Overheating may cause damage to valve.* Turn supplied bypass valve to "Bypass" position (see Bypass Valve Diagram) and make connections to household water lines. *Ensure that inlet and outlet are properly piped, per arrows on valve body.* Leave unit in "Bypass" position until startup procedure.
3. **Connect drain line.** Remove barbed drain line fitting from parts bag. Apply Teflon tape to threads, and turn into the female threaded opening on the back side of the control valve. Connect 5/8" drain line (supplied in parts bag) to barbed end of drain line fitting and run to a nearby drain. Be sure not to submerge drain line end into drain, as a 1 1/2" minimum air gap must be maintained to prevent potential backflow hazard. Firmly secure at drain, while maintaining a minimum 1 1/2" air gap.
4. **Connect brine line (two-tank models only).** Connect 3/8" brine line (supplied in parts bag) to fitting on brine tank and on the control valve. Tighten both fittings with an adjustable wrench.
5. **Install brine tank overflow line.** Install overflow fitting (supplied in parts bag) into hole in side of brine tank. An owner-supplied overflow line should then be attached and run to a nearby drain. *Failure to run overflow line could cause flooding and water damage should the brine tank overflow.*
6. **Connect to electrical power source.** Connect power cord to a dedicated 120v, 15 amp, ground fault interrupt (GFI) outlet.

Proceed to start-up procedure.

Note: This system is not intended to be used for treating water that is microbiologically unsafe or of unknown quality without disinfection before or after the system.

Start-Up Procedure

1. Set Time of Day

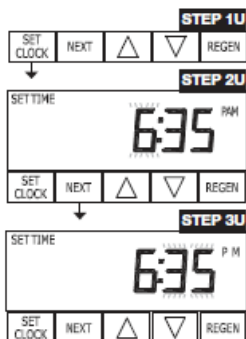


The user can also set the time of day. Time of day should only need to be set after power outages lasting more than 8 hours, if the battery has been depleted and a power outage occurs, or when daylight saving time begins or ends. If a power outage lasting more than 8 hours occurs, the time of day will flash on and off which indicates the time of day should be reset. If a power outage lasts less than 8 hours and the time of day flashes on and off, the time of day should be reset and the battery replaced.

STEP 1U – Press SET CLOCK.

STEP 2U - Current Time (hour): Set the hour of the day using ▼ or ▲ buttons. AM/PM toggles after 12. Press NEXT to go to step 3U.

STEP 3U - Current Time (minutes): Set the minutes of the day using ▼ or ▲ buttons. Press NEXT to exit Set Clock. Press REGEN to return to previous step 2.

2. Program the System

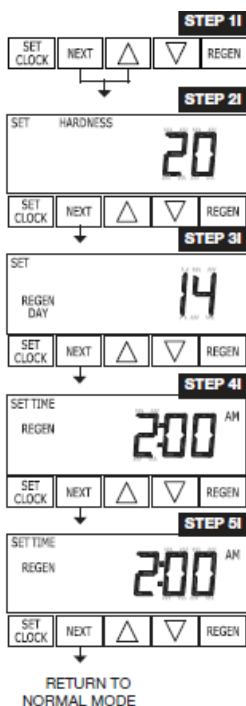

STEP 1I - Press NEXT and ▲ simultaneously for 3 seconds.

STEP 2I – Hardness: Set the amount of hardness in grains of hardness as calcium carbonate per gallon using the ▼ or ▲ buttons. The default is 20 with value ranges from 1 to 150 in 1 grain increments. Note: The grains per gallon can be increased if soluble iron needs to be reduced. Press NEXT to go to step 3I. Press REGEN to exit Installer Display Settings.

STEP 3I – Day Override: When gallon capacity is set to off, Day Override sets the number of days between regenerations. When gallon capacity is set to AUTO or to a number, Day Override sets the maximum number of days between regenerations. If value set to “oFF” regeneration initiation is based solely on gallons used. If value is set as a number (allowable range from 1 to 28) a regeneration initiation will be called for on that day even if sufficient number of gallons were not used to call for a regeneration. Set Day Override using ▼ or ▲ buttons:

- number of days between regeneration (1 to 28); or
- “oFF”.

Press NEXT to go to step 4I. Press REGEN to return to previous step.

STEP 4I – Next Regeneration Time (hour): Set the hour of day for regeneration using ▼ or ▲ buttons. AM/PM toggles after 12. The default time is 2:00 a.m. Press NEXT to go to step 5I. Press REGEN to return to previous step.

STEP 5I – Next Regeneration Time (minutes): Set the minutes of day for regeneration using ▼ or ▲ buttons. Press NEXT to exit Installer Display Settings. Press REGEN to return to previous step.

3. Fill the mineral tank with water: Slowly open bypass valve (see Bypass Valve Diagram, page 3). Press and hold “REGEN” button until “RINSE” appears on the LCD screen. Allow water to flow until tank is full and all air has been bled from the system, water will flow to the drain line. Allow water to flow for 3-4 minutes.

4. Filling the brine tank with water: Slowly press “REGEN” 4 more times, waiting for the valve motor to cycle on and off each time you press. “FILL” will appear on LCD screen. Water will begin to flow to the brine tank. Allow control to fully complete this cycle. Once complete, the unit will go into regular service and the time of day or gallons remaining will appear on LCD screen. This procedure will place the appropriate initial water fill in the brine tank.

System setup is now complete. Add salt to brine tank (Water Control recommends Morton System Saver® pellets). Enjoy your soft water!

General Operation

When the system is operating one of two displays will be shown. Pressing NEXT will alternate between the displays. One of the displays is always the current time of day. The second display is one of the following: days remaining or gallons remaining. Days remaining is the number of days left before the system goes through a regeneration cycle. Capacity remaining is the number of gallons that will be treated before the system goes through a regeneration cycle. The user can scroll between the displays as desired.

If the system has called for a regeneration that will occur at the preset time of regeneration, the words “REGEN TODAY” will appear on the display.

When water is being treated (i.e. water is flowing through the system) the word “Softening” or “Filtering” flashes on the display if a water meter is installed.

Manual Regeneration


To initiate a manual regeneration at the preset delayed regeneration time, press and release “REGEN”. The words “REGEN TODAY” will flash on the display to indicate that the system will regenerate at the preset delayed regeneration time. If you pressed the “REGEN” button in error, pressing the button again will cancel the request.

To initiate a manual regeneration immediately, press and hold the “REGEN” button for three seconds. The system will begin to regenerate immediately. The request cannot be cancelled.

Sanitization

After complete installation of unit, dilute 1/2 cup of unscented laundry bleach into 3 gallons of water, and add to brine tank. Initiate a manual regeneration by following the instructions detailed in the “manual regeneration” section above. Allow the unit to complete its cycle and advance to the “Service” position. The unit is now sanitized and ready for operation.

User Display Settings

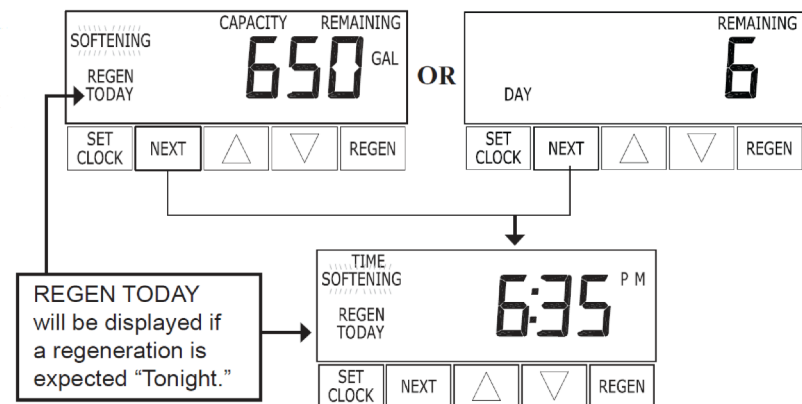

Specifications

Minimum/Maximum Operating Pressures	20 psi (138 kPa or 1.4 bar) - 100 psi (862 kPa or 8.6 bar)
Minimum/Maximum Operating Temperatures	40°F (4°C) - 110°F (43°C)
Power Adapter: Supply Voltage / Frequency Output Voltage / Current	120 VAC / 60 Hz 15 VDC / 500 mA
Model DS24-WC DS32-WC, DST24-WL, DST24-WX DST32-WL, DST32-WX DST48-WL DST60-WL	Cation Exchange Resin (cuft) 0.60 0.75 1.0 1.5 2.0

No user serviceable parts are on the PC board, the motor, or the power adapter. The means of disconnection from the main power supply is by unplugging the power adapter from the wall.

General Warnings

The control valve, fittings and/or bypass are designed to accommodate minor plumbing misalignments but are not designed to support the weight of a system or the plumbing.

Do not use Vaseline, oils, other hydrocarbon lubricants or spray silicone anywhere. A silicone lubricant may be used on black o-rings but is not necessary. **Avoid any type of lubricants, including silicone, on the clear lip seals.**

The nuts and caps are designed to be unscrewed or tightened by hand or with the special plastic wrench. If necessary a pliers can be used to unscrew the nut or cap. Do not use a pipe wrench to tighten or loosen nuts or caps. Do not place a screwdriver in the slots on caps and/or tap with a hammer.

Do not use pipe dope or other sealants on threads. Use Teflon tape on the threaded inlet, outlet and drain fittings. Teflon tape is not necessary on the nut connection or caps because of o-ring seals.

After completing any valve maintenance involving the drive assembly or the drive cap assembly and pistons, unplug power source jack from the printed circuit board (black wire) and plug back in or:

- For valves that use a TC circuit board (three buttons) press and hold SET and DOWN buttons for 3 seconds. The cover button may have other names like "SET HOUR", "CLOCK" or "SET CLOCK" but the circuit board is labeled with SET.
- For all other valves press and hold NEXT and REGEN buttons for 3 seconds.

This resets the electronics and establishes the service piston position. The display should flash all wording, then flash the software version, and then reset the valve to the service position.

All plumbing should be done in accordance with local plumbing codes. The pipe size for the drain line should be a minimum of ½". Backwash flow rates in excess of 7 gpm (26.5 lpm) or length in excess of 20' (6.1m) require ¾" drain line.

Solder joints near the drain must be done prior to connecting the drain line flow control fitting. Leave at least 6" between the drain line control fitting and solder joints when soldering pipes that are connected on the drain line control fitting. Failure to do this could cause interior damage to the drain line flow control fitting.

When assembling the installation fitting package (inlet and outlet), connect the fitting to the plumbing system first and then attach the nut, split ring and o-ring. Heat from soldering or solvent cements may damage the nut, split ring, or o-ring. Solder joints should be cool and solvent cements should be set before installing the nut, split ring, and o-ring. Avoid getting primer and solvent cement on any part of the o-rings, split rings, bypass valve, or control valve.

Plug into an electrical outlet. Note: All electrical connections must be connected according to local codes. (Be certain the outlet is uninterrupted.)

Install grounding strap on metal pipes.

Control Valve Function and Cycles of Operation

This glass filled Noryl (or equivalent) fully automatic control valve is designed as the primary control center to direct and regulate all cycles of a water softener or filter. When the WS1 control valve is manufactured as a softener, the control valve can be ordered to perform downflow or upflow regeneration. The WS1.25 control valve is only available in downflow regeneration. When the WS1 or WS1.25 control valve is set up as a filter, the control valve can be set to perform downflow regeneration or simply backwash. The control valve can be set to regenerate on demand (consumption of a predetermined amount of water) and/or as a time clock (passage of a particular number of days). The control valve can be set so that a softener can meet the Water Quality Association (WQA) Standard S100 or NSF/ANSI Standard 44 efficiency rating.

It is not recommended to change control valves from downflow to upflow brining or vice versa in the field. The valve bodies for downflow and upflow are unique to the regeneration type and should not be interchanged. A mismatch of valve body and regeneration piston will result in hard water bypass during service.

The control valve is compatible with a variety of regenerants and resin cleaners. The control valve is capable of routing the flow of water in the necessary paths to regenerate or backwash water treatment systems. The injector regulates the flow of brine or other regenerants. The control valve regulates the flow rates for backwashing, rinsing, and the replenishing of treated water into a regenerant tank, when applicable.

The control valve uses no traditional fasteners (e.g. screws); instead clips, threaded caps and nuts and snap type latches are used. Caps and nuts only need to be firmly hand tightened because radial seals are used. Tools required to service the valve include one small blade screw driver, one large blade screw driver, pliers, and a pair of hands. A plastic wrench is available which eliminates the need for screwdrivers and pliers. Disassembly for servicing takes much less time than comparable products currently on the market. Control valve installation is made easy because the distributor tube can be cut ½" above to ½" below the top of tank thread. The distributor tube is held in place by an o-ring seal and the control valve also has a bayonet lock feature for upper distributor baskets.

The AC adapter power pack comes with a 15 foot power cord and is designed for use with the control valve. The AC adapter power pack is for dry location use only. The control valve remembers all settings until the battery power is depleted if the power goes out. After the battery power is depleted, the only item that needs to be reset is the time of day; other values are permanently stored in the nonvolatile memory. The control valve battery is not rechargeable but is replaceable.

Service

Checking for a Salt Bridge

A hard crust of “Salt Bridge” can form in the lower half of the salt storage tank. This can be deceiving because the tank will appear to have plenty of salt, but underneath, salt has hardened and when the system regenerates, water cannot reach this level to be made into brine (water and salt).

Breaking a Salt Bridge

Take a wooden broom handle and carefully push it down into the salt, working it up and down. If the tool strikes a hard object (be sure it’s not the bottom or sides of the tank), it’s probably a salt bridge. Carefully break the bridge with the broom handle. Do not pound on the walls of the tank.


Cleaning the Brine Injector Assembly

It is recommended to clean the injector assembly annually to ensure proper system maintenance.

From time-to time, a softener’s brine water injection assembly can become plugged with dirt and debris. This results in poor softener regeneration, which (in-turn) can lead to poor softening performance. Plugging of a brine injector can also cause brine tanks to fill up with water, and eventually overflow.


Replacement Parts

Injector Assembly

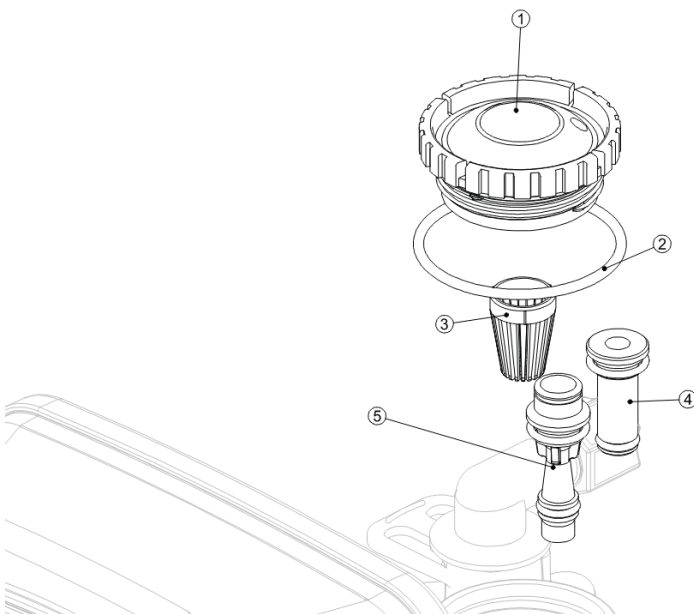

Drawing No.	Order No.	Description	Quantity
1	V3176	INJECTOR CAP	1
2	V3152	O-RING 135	1
3	V3177-01	INJECTOR SCREEN CAGE	1
4	V3010-1Z	WS1 INJECTOR ASY Z PLUG	1
5	V3010-1A	WS1 INJECTOR ASY A BLACK	1
	V3010-1B	WS1 INJECTOR ASY B BROWN	
	V3010-1C	WS1 INJECTOR ASY C VIOLET	
	V3010-1D	WS1 INJECTOR ASY D RED	
	V3010-1E	WS1 INJECTOR ASY E WHITE	
	V3010-1F	WS1 INJECTOR ASY F BLUE	
	V3010-1G	WS1 INJECTOR ASY G YELLOW	
	V3010-1H	WS1 INJECTOR ASY H GREEN	
	V3010-1I	WS1 INJECTOR ASY I ORANGE	
	V3010-1J	WS1 INJECTOR ASY J LIGHT BLUE	
	V3010-1K	WS1 INJECTOR ASY K LIGHT GREEN	
Not Shown	V3170	O-RING 011	*
Not Shown	V3717	O-RING 013	*


Piston/Seal/Spacer Assembly

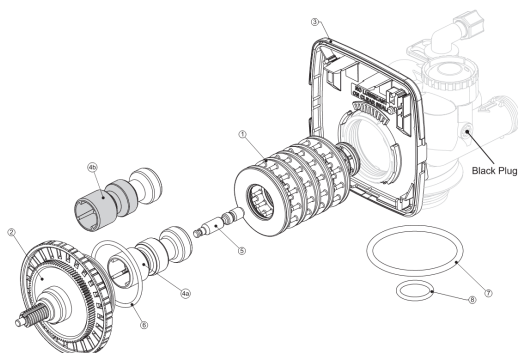

Drawing No.	Order No.	Description	Quantity
1	V3005	WS1 SPACER STACK ASSEMBLY	1
2	V3004	DRIVE CAP ASSEMBLY	1
3	BACK PLATE	REFER TO PROGRAMMING AND COVER DRAWING MANUAL	1
4A	V3011	WS1 PISTON DOWNFLOW ASSEMBLY	1
4B	V3011-01	WS1 PISTON UPFLOW ASSEMBLY	1
5	V3174	WS1 REGENERANT PISTON	1
6	V3135	O-RING 228	1
7	V3180	O-RING 337	1
8	V3105	O-RING 215 (DISTRIBUTOR TUBE)	1


Replacement Parts

Piston/Seal/Spacer Assembly

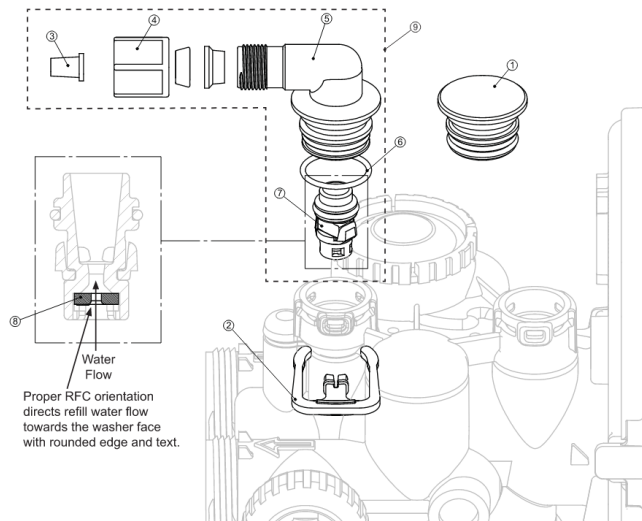


Drawing No.	Order No.	Description	Quantity
1	V3195-01	WS1 REFILL PORT PLUG ASSY (BACKWASH ONLY)	1
2	H4615	ELBOW LOCKING CLIP	1
3	JCP-P-6	POLYTUBE INSERT 3/8"	1
4	JCPG-6PBLK	NUT 3/8"	1
5	H4613	ELBOW CAP 3/8"	1
6	V3163	O-RING 019	1
7	V3165-01	WS1 RFC RETAINER ASSY (INCLUDES V3182)	1
8	V3182	WS1 RFC	1
9	V3330-01	WS1 BRINE ELBOW ASSY W/RFC 3/8"	1

Water Meter Assembly

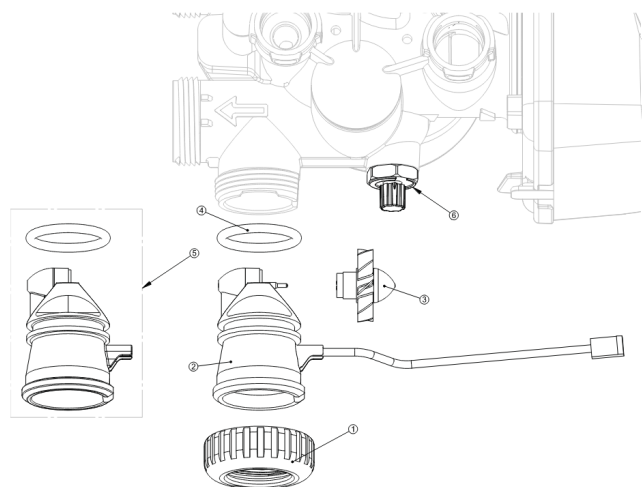

Drawing No.	Order No.	Description	Quantity
1	V3151	WS1 NUT 1" QC	1
2	V3003	WS1 METER ASSY (INCLUDES V3118-01)	1
3	V3118-01	WS1 TURBINE ASSY	1
4	V3105	O-RING 215	1
5	V3003-01	WS1 METER PLUG ASSY	1
6	V3013	MIXING VALVE	1


Bypass Valve Assembly

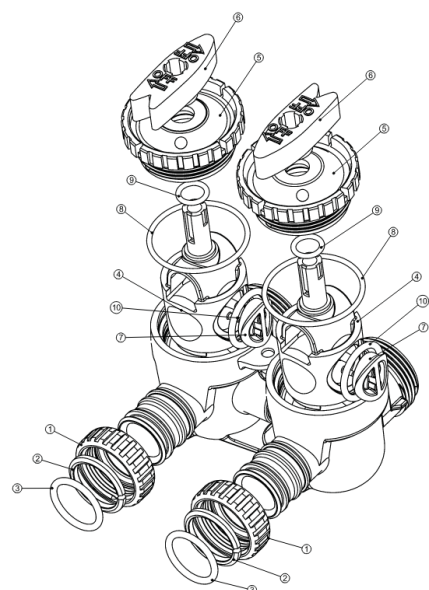

Drawing No.	Order No.	Description	Quantity
1	V3151	WS1 NUT 1" QUICK CONNECT	2
2	V3150	WS1 SPLIT RING	2
3	V3105	O-RING 215	2
4	V3145	WS1 BYPASS 1" ROTOR	2
5	V3146	WS1 BYPASS CAP	2
6	V3147	WS1 BYPASS HANDLE	2
7	V3148	WS1 BYPASS ROTOR SEAL RETAINER	2
8	V3152	O-RING 135	2
9	V3155	O-RING 112	2
10	V3156	O-RING 214	2


Replacement Parts

Installation Fitting Assembly

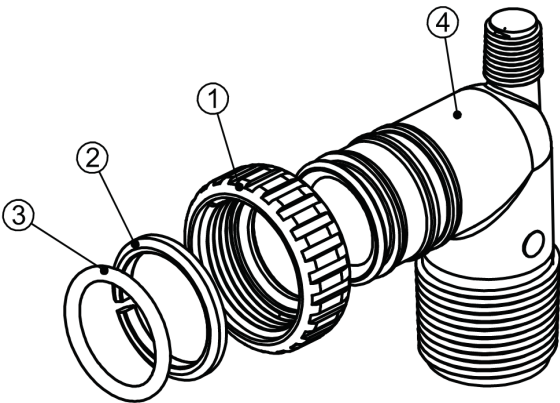

Drawing No.	Order No.	Description	Quantity
1	V3151	WS1 NUT 1" QUICK CONNECT	2
2	V3150	WS1 SPLIT RING	2
3	V3105	O-RING 215	2
4	V3149	WS1 FITTING 1" NPT PVC MALE ELBOW	2

Resin Tank Assembly

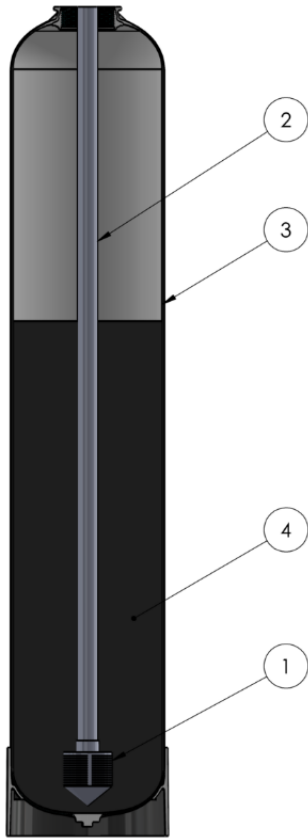

Model No.	Drawing No.	Order No.	Description	Quantity
DS24-WC	1	RT-UDB	DISTRIBUTOR BASKET	1
	2	RT-DT48	DISTRIBUTOR TUBE	1
	3	RT-0835	8X35 RESIN TANK	1
	4	RT-CAR060	CATION EXCHANGE RESIN	1
DS32-WC	1	RT-UDB	DISTRIBUTOR BASKET	1
	2	RT-DT48	DISTRIBUTOR TUBE	1
	3	RT-0935	9X35 RESIN TANK	1
	4	RT-CAR075	CATION EXCHANGE RESIN	1
DST24-WL	1	RT-UDB	DISTRIBUTOR BASKET	1
	2	RT-DT48	DISTRIBUTOR TUBE	1
	3	RT-0844	8X44 RESIN TANK	1
	4	RT-CAR075	CATION EXCHANGE RESIN	1
DST24-WX	1	RT-UDB	DISTRIBUTOR BASKET	1
	2	RT-DT48	DISTRIBUTOR TUBE	1
	3	RT-0948	9X48 RESIN TANK	1
	4	DS-CAR075	CATION EXCHANGE RESIN	1
DST32-WX	1	RT-UDB	DISTRIBUTOR BASKET	1
	2	RT-DT48	DISTRIBUTOR TUBE	1
	3	RT-1044	10X44 RESIN TANK	1
	4	RT-CAR010	CATION EXCHANGE RESIN	1
DST48-WL	1	RT-UDB	DISTRIBUTOR BASKET	1
	2	RT-DT72	DISTRIBUTOR TUBE	1
	3	RT-1054	10X54 RESIN TANK	1
	4	RT-CAR150	CATION EXCHANGE RESIN	1
DST60-WL	1	RT-UDB	DISTRIBUTOR BASKET	1
	2	RT-DT72	DISTRIBUTOR TUBE	1
	3	RT-1252	12X52 RESIN TANK	1
	4	RT-CAR200	CATION EXCHANGE RESIN	1

Troubleshooting

1. Softener Fails To Regenerate.	A. Electrical service to unit has been interrupted.	A. Assure permanent electrical service (check fuse, plug, pull chain or switch).
	B. Timer programming bad (improper	B. Check programming and reset as needed.
2. Softener Delivers Hard Water.	A. By-pass valve is open.	A. Close by-pass valve.
	B. No salt in brine tank.	B. Add salt to brine tank and maintain salt level above water level.
	C. Injectors or screen plugged.	C. Clean or replace injectors and screen.
	D. Insufficient water flowing into brine tank.	D. Check brine tank fill time and clean brine line flow if plugged.
	E. Hot water tank hardness.	E. Repeated flushing of the hot water tank is required.
	F. Flow meter jammed.	F. Check flow indicator light for flow. Re-move obstruction from flow meter.
	G. Flow meter cable disconnected or not plugged into meter.	G. Check meter cable connection to timer and meter.
	H. Improper programming.	H. Reprogram the control to the proper re-generation type, inlet water hardness, capacity or flow meter size.
	I. Plugged brine line or air check.	I. Remove and clean any sediment from brine tank and brine valve assembly.
	J. Salt bridge has formed.	J. Refer to <i>Breaking a Salt Bridge</i> section in manual.
	K. No water in brine tank.	K. Ensure safety float is not stuck.
	L. Unit is plumbed backwards.	L. Check that the unit is plumbed correctly.
	M. Water hardness has increased or is set incorrectly.	M. Retest hardness and change settings.
	N. Water pressure is too low.	N. Line pressure must be at least 20 PSI.
3. Unit Uses Too Much Salt.	A. Improper salt setting.	A. Check salt usage and salt setting.
	B. Excessive water in brine tank.	B. See problem No. 7.
	C. Improper programming.	C. Check programming and reset as needed.
4. Loss of Water Pressure.	A. Iron buildup in line to water conditioner.	A. Clean line to water conditioner.
	B. Iron buildup in water conditioner.	B. Clean control and add resin cleaner to resin bed. Increase frequency of regeneration.
5. Loss of Resin Through Drain Line.	A. Air in water system.	A. Assure that well system has proper air eliminator control and check for dry
	B. Drain line flow control is too large.	B. Ensure drain line flow control is sized correctly.
6. Iron in Conditioned Water.	A. Fouled resin bed.	A. Check backwash, brine draw and brine tank fill. Increase frequency of regeneration. Increase backwash
	B. Iron content exceeds recommended	B. Add iron removal filter or system.
7. Excessive Water in Brine Tank.	A. Plugged drain line flow control.	A. Clean flow control.
	B. Brine valve fail-	B. Clean brine valve.
	C. Improper programming.	C. Check programming and reset as needed.
8. Salt Water in Service Line.	A. Plugged injector system.	A. Clean injector and replace screen.
	B. Improper programming.	B. Check programming and reset as needed.
	C. Foreign material in brine	C. Clean or replace brine valve.
	D. Foreign material in brine line	D. Clean brine line flow control.
	E. Low water pres-	E. Raise water pressure.
9. Softener Fails to Draw Brine.	A. Drain line flow control is plugged.	A. Clean drain line flow control.
	B. Injector is	B. Clean or replace injectors.
	C. Improper programming.	C. Check programming and reset as needed.
	D. Line pressure is too low.	D. Increase line pressure (line pressure must be at least 20 PSI at all times.)
10. Drain Flows Continuously.	A. Foreign material in control.	A. Remove piston assembly and inspect bore, remove foreign material & check control in various ports.
12. Loss of capacity.	A. Increased raw water hardness	A. Reset unit to the new capacity.
	B. Brine concentration and/or quantity.	B. Keep brine tank full of salt at all times. Clean it yearly. Salt may be bridged. If using a salt grid plate ensure refill water is over it.
	C. Resin fouling. Future fouling.	C. Call Water Control Corp, find out how to confirm it, clean the resin and prevent.
	D. Poor distribution, channeling (uneven bed surface).	D. Call Water Control Corp. Check distributors and backwash flow.

Official Warranty

Water Control Corporation

Dakotah Series Water Softeners

Limited Warranty

Water Control Corporation warrants the control valve to be free of manufacturers defects for a period of 3 (three) years from the date of installation, and the fiberglass reinforced mineral tank, and plastic brine tank, to be free from leaking due to manufacturer's defects for a period of 5 (five) years. We will, at our discretion, repair or replace defective products. This warranty does not include any costs associated with removal of defective products, or installation of replacement products. All replacement parts will be provided FOB Ramsey, MN. This warranty is transferable.

DISCLAIMER OF IMPLIED WARRANTIES

Water Control Corporation makes no warranties except those expressly stated in this document. To the extent permitted by the laws of the applicable state, **ALL WARRANTIES CONTAINED IN THIS DOCUMENT ARE EXPRESSLY IN LIEU OF, AND WATER CONTROL CORPORATION EXPRESSLY DISCLAIMS, ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.**

WHAT IS NOT COVERED BY THESE WARRANTIES

1. Conditions and damages resulting from any of the following:
 - Wear caused by unfavorable water conditions
 - Improper installation, delivery, or maintenance
 - Any repair, modification, alteration, or adjustment not authorized by the manufacturer or an authorized servicer
 - Misuse, abuse, accidents, or unreasonable use
 - Improper setting of any control
 - Incorrect electric current, voltage, or supply
2. Warranties are void if the original serial numbers have been removed, altered, or cannot be readily determined.
3. The cost of service or service call to:
 - Correct installation errors
 - Instruct the user on proper use of the product
 - Transport the product to the servicer
4. Any costs associated with removal of defective products, or installation of replacement products.
5. Consequential, special, or incidental damages sustained by any person as a result of the breach of these warranties. Some states do not allow the exclusion or limitation of consequential or incidental damages, so the above exclusion may not apply to you.

